

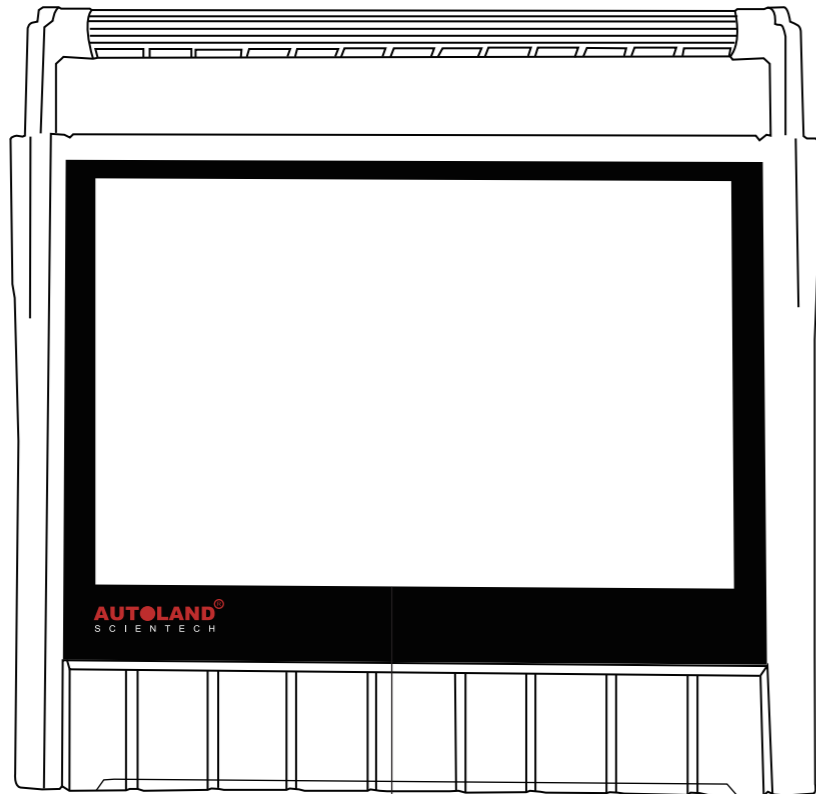


iSCAN 4S Features Overview

iSCAN 4S Hardware Features

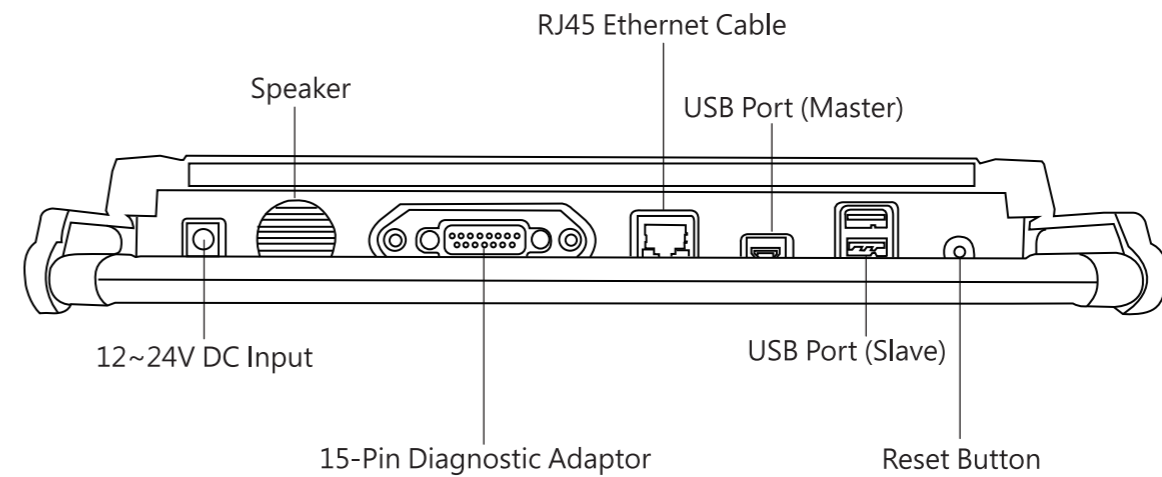

10.1" IPS LCD Touch Screen

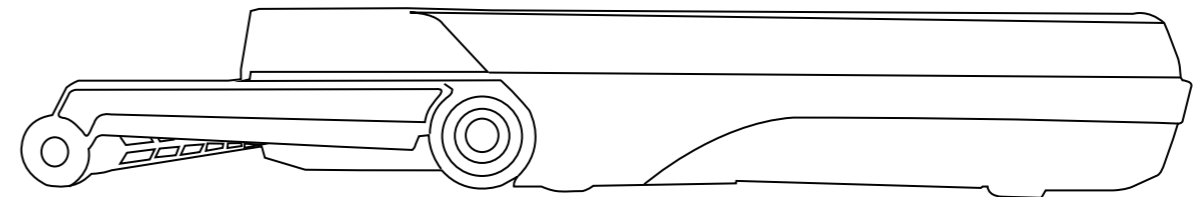


Quick Operational Guide

Step 1 Locate Vehicle Diagnostic Connector

For most vehicles, OBDII connector is located by the driver's seat under the dashboard. Some models may have a lid covering the connector.


Attention:

1. Vehicles manufactured before year of 2000 may be equipped with different connector, or require different connector for different systems. Ex. Toyota before year of 2000 installed the non-OBDII connector under engine hood.
2. Please use correct diagnostic adaptor to connect with vehicle, otherwise connection may fail.

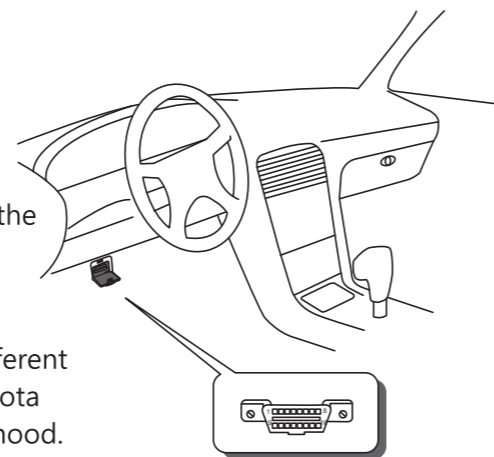

Step 2 Diagnostic Connection


1. Connect iSCAN 4S to vehicle connector via AC-EC7 and corresponding adaptor.
2. After iSCAN 4S powered on and ready, select [Diagnostic], then select vehicle make.

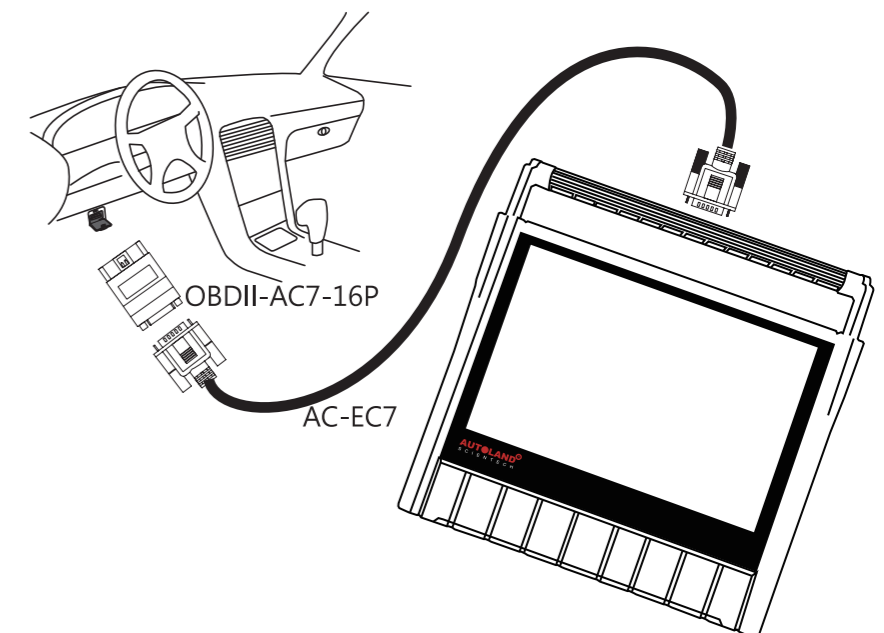


iSCAN 4S Features Overview

Software Download & Update


Software Update

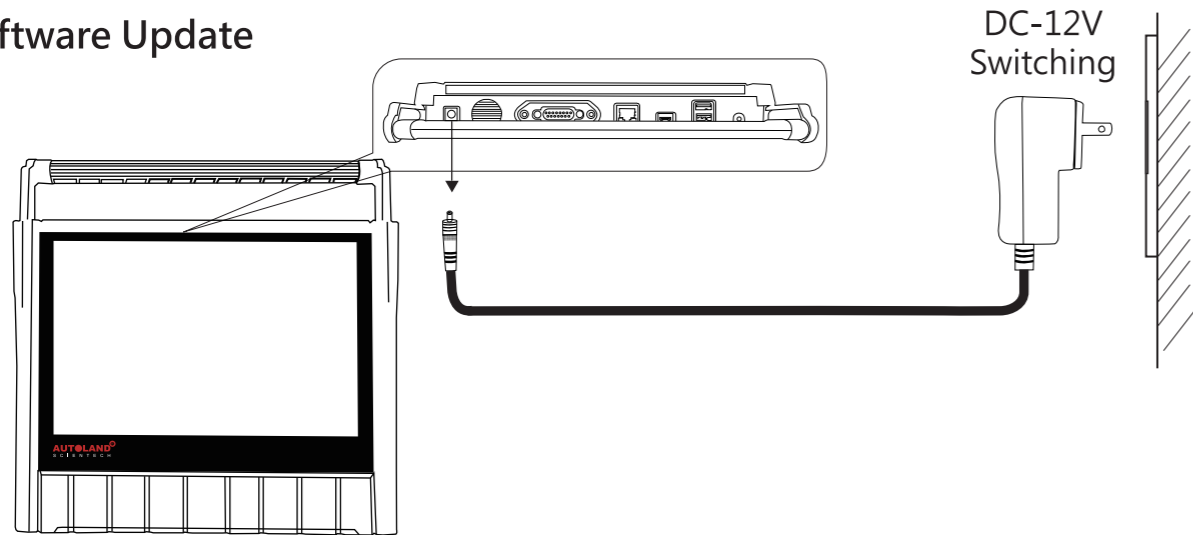


1. Select "Setup", then select "Wifi" connection.

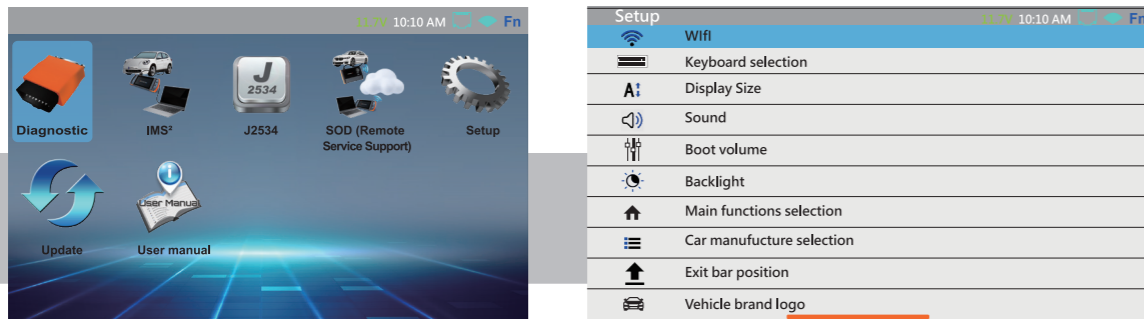


2. After Internet connection is complete, select "Update" at main page.

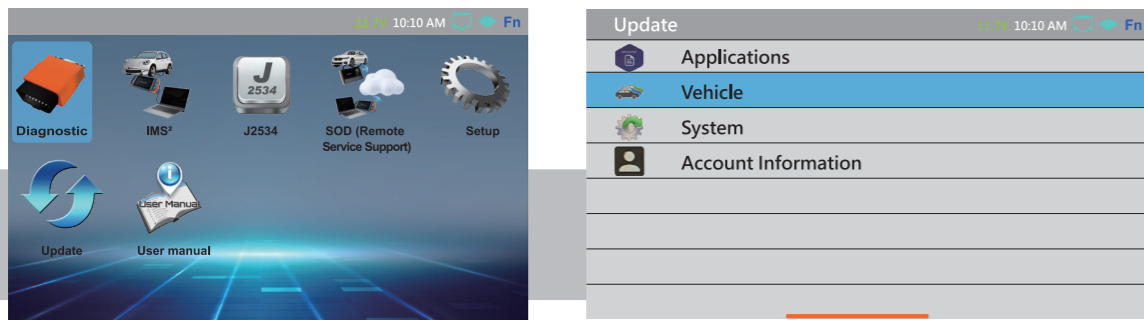

3. Entering Software Update, select [install all] or select [install] individually.

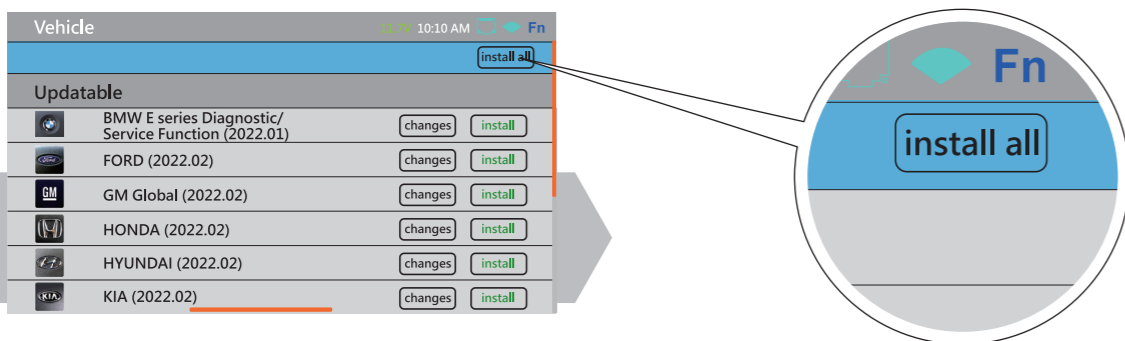


Exit bar to previous page

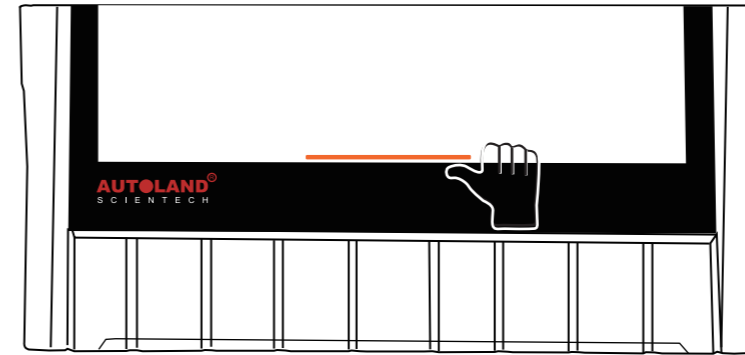


Swipe up from the bottom orange edge


Exit bar position setting

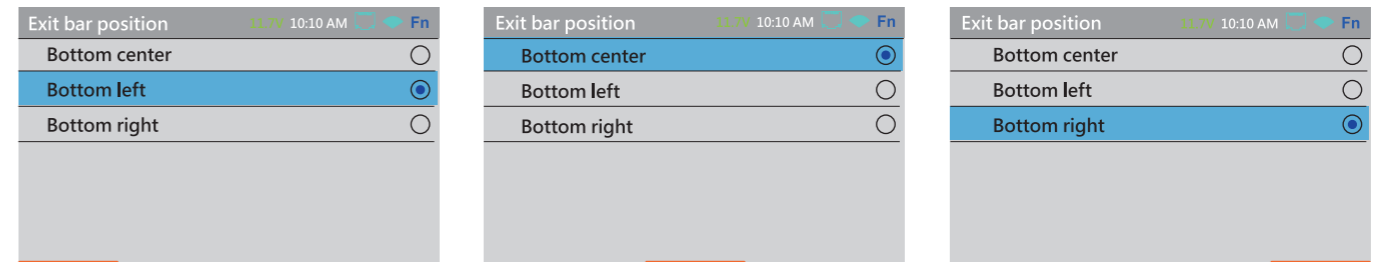

Function Key

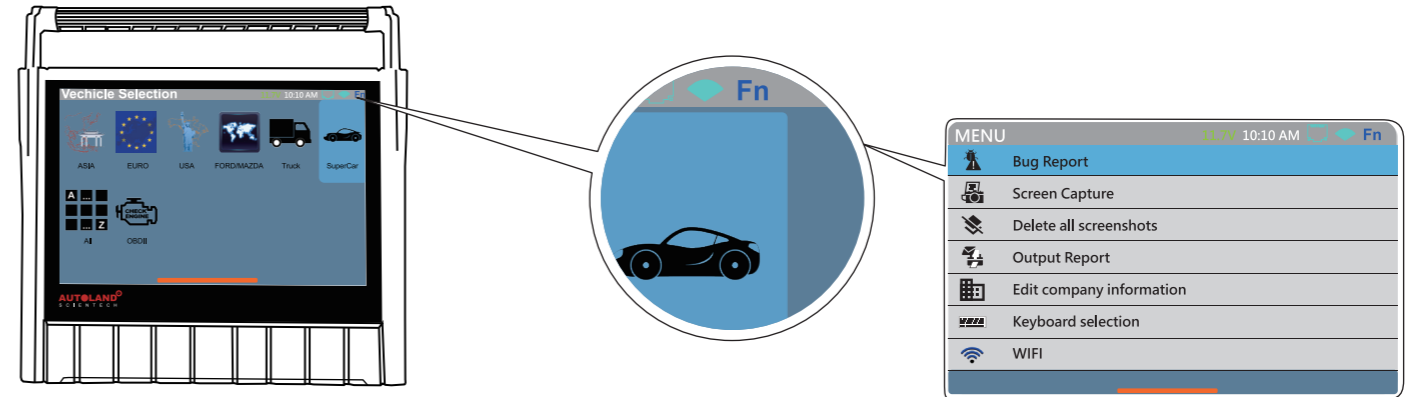

Output Report: Print, email, USB

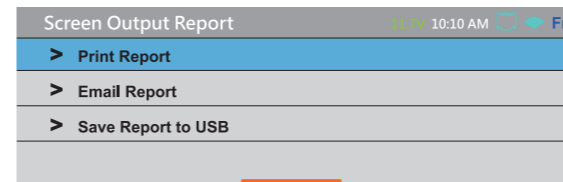

Printing Function Using WiFi or wired Printer

email Send PDF file via email

USB Storage device

Keyboard selection

